Altos R720 Installation Configuration Guide

Abstract

This document provides you a quick OS installation guide on Altos R720, including Windows Server 2003, Windows Server 2003 x64 Edition, Windows 2000, Red Hat Enterprise Linux 4.0 (32-bit & 64-bit), SuSE Linux Enterprise Server 9 (32-bit & 64-bit), SuSE Linux Enterprise Server 10 (32-bit & 64-bit) and NetWare 6.5.

Version: 1.1

June 2007

Downloaded from www.Manualslib.com manuals search engine

© 2006 Acer Incorporation. All rights reserved.

This paper is for informational purposes only. ACER MAKES NO WARRANTIES, EXPRESS OR IMPLIED, IN THIS DOCUMENT.

Acer, Acer Altos are registered trademarks or trademarks of Acer Incorporation.

Other product or company names mentioned herein may be the trademarks of their respective owners.

Downloaded from www.Manualslib.com manuals search engine

CONTENTS

INTRODUCTION **1**

Where Can I Download the Latest Altos R720 Installation Configuration Guide 1

HARDWARE SPECIFICATION **1**

BOARD LAYOUT **4**

System Block Diagram 4

DIMM POPULATION GUIDELINE **5**

Memory population S

Memory population with mirroring S

Memory population with Sparing S

OS INSTALLATION TIPS **6**

Windows Server 2003 x64 Enterprise Edition Installation (with integrated SAS RAID) 6

- Drivers Required 6
- Software Required 7
- Configuring integrated SAS RAID 7
- Installation Tips 7
- Chipset Driver Installation 7
- Gigabit Ethernet Driver Installation 8
- IOAT Driver Installation 9
- Hot-swap Backplane Driver Installation 9
- ATI ES1000 Installation 9
- Microsoft Scalable Networking Pack Installation 10
- Intel RAID Web Console Installation 10
- Intel PROSet Utility Installation 10

Windows Server 2003 Enterprise Edition SP1 Installation (with integrated SAS RAID) 10

- Drivers Required 10
- Software Required 11
- Configuring integrated SAS RAID 11
- Installation Tips 11
- Chipset Driver Installation 12
- Gigabit Ethernet Driver Installation 12
- IOAT Driver Installation 13
- Hot-swap Backplane Driver Installation 13
- ATI ES1000 Installation 14
- Microsoft Scalable Networking Pack Installation 14
- Intel RAID Web Console Installation 14
- Intel PROSet Utility Installation 14

Windows 2000 Advanced Server SP4 Installation (with integrated SAS RAID) 14

- Drivers Required 1S
- Software Required 1S

Downloaded from www.Manualslib.com manuals search engine

Configuring integrated SAS RAID 15
Installation Tips 15
Chipset Driver Installation 16
Gigabit Ethernet Driver Installation 16
IOAT Driver Installation 17
Hot-swap Backplane Driver Installation 17
ATI ES1000 Installation 17
Intel RAID Web Console Installation 18
Intel PROSet Utility Installation 18
Red Hat Enterprise Linux 4.0 EM64T Update 2 Installation (with integrated SAS RAID) 18
Drivers Required 18
Software Required 19
Configuring integrated SAS RAID 19
Installation Tips 19
Gigabit Ethernet Driver Installation 19
Intel RAID Web Console Installation 20
Red Hat Enterprise Linux 4.0 Update 2 Installation (with integrated SAS RAID) 20
Drivers Required 20
Software Required 21
Configuring integrated SAS RAID 21
Installation Tips 21
Gigabit Ethernet Driver Installation 21
Intel RAID Web Console Installation 22
SUSE Linux Enterprise Server 10 EM64T Installation (with integrated SAS RAID) 22
Drivers Required 22
Software Required 23
Configuring integrated SAS RAID 23
Installation Tips 23
Gigabit Ethernet Driver Installation 24
Intel RAID Web Console Installation 25
SUSE Linux Enterprise Server 10 Installation (with integrated SAS RAID) 25
Drivers Required 25
Software Required 26
Configuring integrated SAS RAID 26
Installation Tips 26
Gigabit Ethernet Driver Installation 27
Intel RAID Web Console Installation 28
SUSE Linux Enterprise Server 9 EM64T Service Pack 3 Installation (with integrated SAS RAID) 28
Drivers Required 28
Software Required 28
Configuring integrated SAS RAID 29
Installation Tips 29

Downloaded from www.Manualslib.com manuals search engine

Gigabit Ethernet Driver Installation 29
Intel RAID Web Console Installation 30
SUSE Linux Enterprise Server 9 Service Pack 3 Installation (with integrated SAS RAID) 30
Drivers Required 30
Software Required 31
Configuring integrated SAS RAID 31
Installation Tips 31
Gigabit Ethernet Driver Installation 31
Intel RAID Web Console Installation 32
NetWare 6.S SPS Installation (with integrated SAS RAID) 32
Drivers Required 32
Installation Tips 33

APPENDIX A: INTEGRATED SAS RAID CREATION 35
Configuring integrated SAS RAID 3S
Starting Integrated SAS RAID Configuration Utility 3S
Loading Factory Default Setting 3S
Creating and Initialing a RAID Volume 3S
Assigning a Hot Spare Disk 3S

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

INTRODUCTION

This article describes the Altos R720 Installation Configuration guide:

- Hardware parts give you a briefly and quick hardware information about Altos R720
- The operating system installation tips.

Where Can I Download the Latest Altos R720 Installation Configuration Guide

The Altos R910 Installation Configuration Guide would be updated on a monthly basis. Please download the latest release from the Support Website

http://support.acer-euro.com

Downloaded from www.Manualslib.com manuals search engine

HARDWARE SPECIFICATION

Model	Altos R720
Processor	Dual-Core Intel Xeon processors 5000 sequence (Dempsey or Woodcrest) at 2.66Hz or above Frequency
Front Side Bus	• 667MHz • 1066MHz • 1333MHz
Cache	• 2 x 2MB L2 cache • 4MB L2 cache
Chipset	Intel chipset • North Bridge: Intel 5000P (Blackford) • South Bridge: Intel 6321E5B
Memory	• Quad FB-DIMM memory channels • 8 x DIMM sockets support 512MB/1GB/2GB FB-DIMM 533 or FB-DIMM 667 • Maximum memory of 32GB (when 4GB DIMM is available) • Up to 17 GB/s maximum b/w for FB-DIMM 533 • Up to 21 GB/s maximum b/w for FB-DIMM 677 • Support memory sparing and memory mirroring (2006 Q3)
Storage Interface	• LSI SAS 1068 3Gb/s SAS controller • One ATA-100 port
Expansion Slots	Total 5 slots (three full height slots, two low profile slots) Low profile riser slot • Two x8 PCI-Express slots (with x4 throughput) Full height riser slot • Option 1: One 64-bits/133MHz/3.3V PCI-X slot + Two x8 PCI-Express slots (with x4 throughput) • Option 2: Three 64-bits/133MHz/3.3V PCI-X slots • Option 3: Three 64-bits 66MHz/100MHz/133MHz PCI-X slots
VGA	Onboard ATI ES1000 video controller w/ 16MB SDRAM
SAS Controller	• Integrated SAS RAID with RAID 0, 1, 5, 10 and 50 support • 128MB of cache (DDR2 400 registered, 244 pin Mini DIMM) • BBU support

Downloaded from www.Manualslib.com manuals search engine

LAN Controller	• Onboard Intel 82S63EB dual-channel gigabit network interface controller • Supporting Intel I/O Acceleration Technology
BMC	BMC (Baseboard Management Controller) • IPMI 2.0 compliant Option • Can be upgraded to Intel Remote Management Module with Virtual Media and remote KVM support
Availability sub-system	
System Power Supply	• 1+1 redundant 7S0W power supply • Hot Swap
Storage Subsystem	
Drive Bays	• Five 1" front accessible drive bay for 3.S" SAS/SATA HDD • One 3.S" front accessible half-height device bay space that shared with 6th HDD bay or Tape backup device
Hard Disks	• Up to 6 SAS/SATA HDD (without FDD and tape drive, additional 6th Hard Drive Upgrade Kit is required) • Only support S SAS/SATA HDD when Slim optical drive and FDD installed simultaneously • Only support 4 SAS/SATA HDD when Slim optical drive, FDD and tape drive installed simultaneously

Downloaded from www.Manualslib.com manuals search engine

BOARD LAYOUT

System Block Diagram

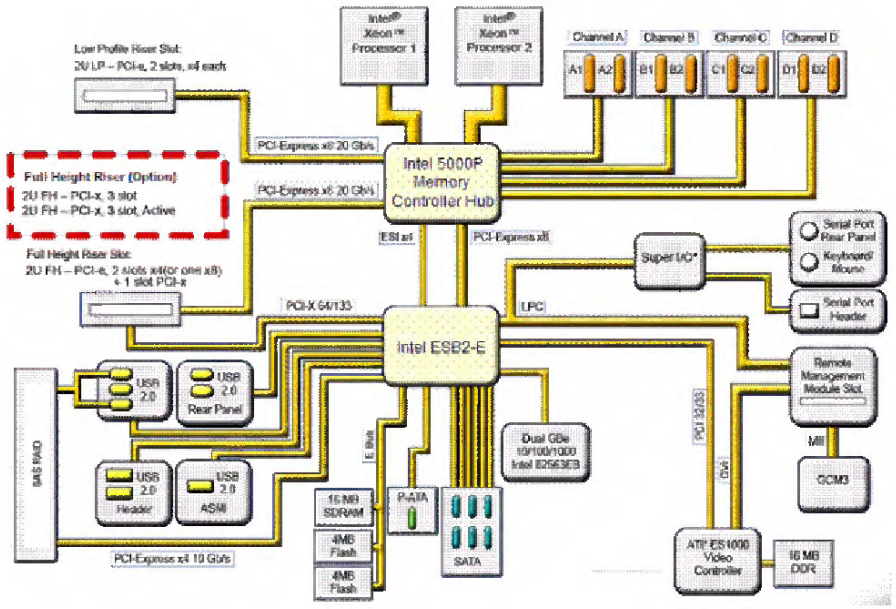

Downloaded from www.Manualslib.com manuals search engine

DIMM POPULATION GUIDELINE

Memory population

	Branch 0				Branch 1			
#	DIMM A1	DIMM A2	DIMM B1	DIMM B2	DIMM C1	DIMM C2	DIMM D1	DIMM D2
1	512 MB							
2	512 MB		512 MB					
3	512 MB		512 MB		512 MB		512 MB	
4	512 MB	512 MB	512 MB	512 MB	512 MB		512 MB	
5	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB	512 MB
6	1 GB							
7	1 GB		1 GB					
8	1 GB		1 GB		1 GB		1 GB	
9	1 GB	1 GB	1 GB	1 GB	1 GB		1 GB	
10	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB	1 GB
11	2 GB							
12	2 GB		2 GB					
13	2 GB		2 GB		2 GB		2 GB	
14	2 GB	2 GB	2 GB	2 GB	2 GB		2 GB	
15	2 GB	2 GB	2 GB	2 GB	2 GB	2 GB	2 GB	2 GB

Memory population with mirroring

	Branch 0				Branch 1				Total Memory	
#	DIMM A1	DIMM A2	DIMM B1	DIMM B2	DIMM C1	DIMM C2	DIMM D1	DIMM D2	Physical Memory	Detected by OS
1	512 MB		512 MB		512 MB (Mirror)		512 MB (Mirror)		2 GB	1 GB
2	512 MB	512 MB	512 MB	512 MB	512 MB (Mirror)	512 MB (Mirror)	512 MB (Mirror)	512 MB (Mirror)	4 GB	2 GB
3	1 GB		1 GB		1 GB (Mirror)		1 GB (Mirror)		4 GB	2 MB
4	1 GB	1 GB	1 GB	1 GB	1 GB (Mirror)	1 GB (Mirror)	1 GB (Mirror)	1 GB (Mirror)	8 GB	4 GB
5	2 GB		2 GB		2 GB (Mirror)		2 GB (Mirror)		8 GB	4 GB
5	2 GB	2 GB	2 GB	2 GB	2 GB (Mirror)	2 GB (Mirror)	2 GB (Mirror)	2 GB (Mirror)	16 GB	8 GB

Memory population with Sparing

	Branch 0				Branch 1				Total Memory	
#	DIMM A1	DIMM A2	DIMM B1	DIMM B2	DIMM C1	DIMM C2	DIMM D1	DIMM D2	Physical Memory	Detected by OS
1	512 MB (Sparing)	512 MB							1 GB	512 MB
2	512 MB (Sparing)	512 MB	512 MB (Sparing)	512 MB					2 GB	1 GB
3	512 MB (Sparing)	512 MB	512 MB (Sparing)	512 MB	512 MB (Sparing)	512 MB	512 MB (Sparing)	512 MB	4 GB	2 GB
4	1 GB (Sparing)	1 GB							2 GB	1 GB
5	1 GB (Sparing)	1 GB	1 GB (Sparing)	1 GB					4 GB	2 GB
5	1 GB (Sparing)	1 GB	1 GB (Sparing)	1 GB	1 GB (Sparing)	1 GB	1 GB (Sparing)	1 GB	8 GB	4 GB
7	2 GB (Sparing)	2 GB							4 GB	2 GB
8	2 GB (Sparing)	2 GB	2 GB (Sparing)	2 GB					8 GB	4 GB
9	2 GB (Sparing)	2 GB	2 GB (Sparing)	2 GB	2 GB (Sparing)	2 GB	2 GB (Sparing)	2 GB	16 GB	8 GB

Downloaded from www.Manualslib.com manuals search engine

OS INSTALLATION TIPS

Below is Altos R720 OS certification matrix

Operating System	Status	Note
Windows 2000 Advanced Server, Service Pack 4	Tested	
Windows Server 2003 x64 Enterprise Edition	Tested	
Windows Server 2003 Enterprise Edition SP1	Tested	
Red Hat Enterprise Linux 4.0 EM64T Update 2	Tested	
Red Hat Enterprise Linux 4.0 Update 2	Tested	
SUSE Linux Enterprise Server 9 EM64T SP3	Certified	
SUSE Linux Enterprise Server 9 SP3	Certified	
NetWare 6.5 Support PackS	Tested	

The drivers required for the OS installation can be found on the EasyBUILD 7.1 build 100 (or later). We suggest that you use the drivers contained in the EasyBUILD 7.1 build 100 (or later), as these drivers are tested and qualified by Acer.

There are two ways you can get the drivers. You can either make diskettes from EasyBUILD 7.1 build 100 (or later), or put it in the optical drive and search the driver directly.

NOTE. In this section, we assume the OS is installed on the HDD connected to the onboard SAS or integrated SAS RAID.

NOTE. The internal USB floppy drive is an option. If you do not have this option and you need to apply the driver during the OS installation, you need an external USB floppy drive.

Windows Server 2003 x64 Enterprise Edition Installation (with integrated SAS RAID)

Below information describes how to manually install Windows Server 2003 x64 Enterprise Edition on Altos R720.

Drivers Required

For Windows 2003 x64 Installation, the following device drivers are required.

Device	Version	Directory on EasyBUILD
Integrated SAS RAID	1.17.0.64	\Disk\R720\RAID\Integrated_SAS\WS2K3X64
Onboard Intel S000P Chipset	7.3.0.1011	\Disk\R720\onboard\Chipset\
Onboard Intel	9.3.39	\Disk\R720\NIC\Intel\pro1000.net\ws03

Downloaded from www.Manualslib.com manuals search engine

82563E8 Gigabit Ethernet		x64\
Onboard ATI ES1000	8.243.0	\Disk\R720\onboard\VGA\W2K3\
Onboard USB 2.0	S.2.3790.1380	OS built-in
IOAT	1.2.S2.0	\Disk\R720\onboard\IOAT\WS2K3X64
Hot-swap backplane	S.0.60SS.2	\Disk\R720\onboard\Backplane\Windows

Software Required

The management utility of integrated SAS RAID and NIC can be found in the EasyBUILD 7.1 build 100 (or later).

Software	Version	Directory on EasyBUILD
Microsoft Scalable Networking Pack	N/A	http://www.microsoft.com/downloads/details.aspx?FamilyID=778ee6fe-S3S9-4c2f-b89d-f3Sf2b1b83cd&DisplayLang=en
Intel RAID Web Console	1.13-00	\APP\R720\RAID\Integrated_SAS\Windows
Intel PROSet Utility	10.4.4.2	\APP\R720\NIC\PROSETDX\WS2003XPx64\

Configuring integrated SAS RAID

Please refer to the Appendix A. for the integrated SAS RAID configuration.

Installation Tips

NOTE. There is no built-in driver Integrated SAS RAID in the Windows Server 2003 x64. If you do not have the optional internal USB floppy drive, you need an external USB floppy drive for applying driver during the OS installation.

1. As Windows Server 2003 x64 can't recognize the integrated SAS RAID, you need to make a driver diskette from the EasyBUILD 7.1 build 100 first before the installation.
2. Press F6 at the beginning of installation for providing the driver diskette for the integrated SAS RAID.
3. Select **"Intel(R) SAS RAID Controller Driver (Server 2003 for x64)"** as target driver
4. After loading the RAID driver from diskette, follow the normal procedure to finish the installation.

Chipset Driver Installation

1. After the installation completes, you would see the following devices with yellow mark in Device Manager.

Downloaded from www.Manualslib.com manuals search engine

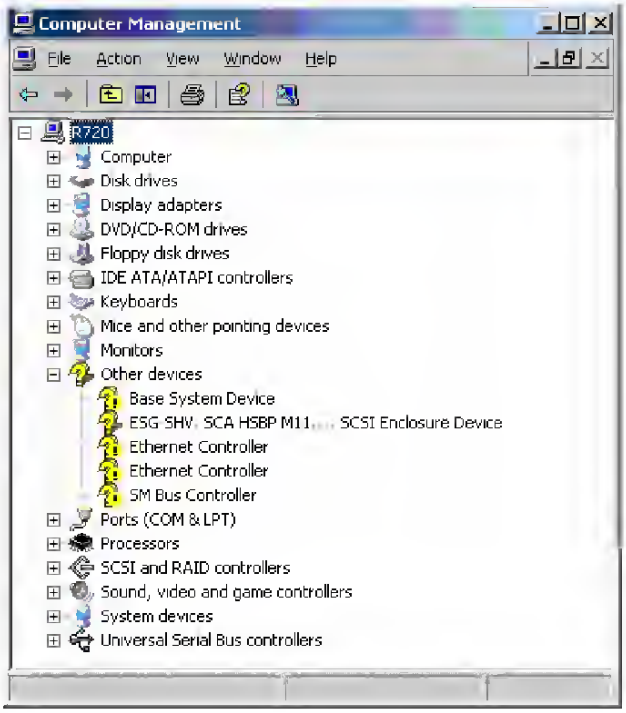

2. Please insert the EasyBUILD 7.1 build 100 into the optical drive
3. Expand **Drivers -> Altos R720 -> Chipset**, select **Windows Server 2003 x64** and click on **Setup**.
4. Follow the instruction to install the driver and reboot the server after the chipset driver is installed.

Gigabit Ethernet Driver Installation

1. There are two **Ethernet Controller** listed under **Other device** in Windows Device Manager. It should be the onboard Intel 82563EB Gigabit Ethernet controller. You could find the driver in EasyBUILD 7.1 build 100. Please do the same on both of the devices
2. Right-click on the **Ethernet Controller** and select **Update Driver**.
3. Select **No, not this time**. Do not connect to Windows Update to search the driver.
4. Select **Install from a list or specific location (Advanced)**.
5. Select **Search the best driver these locations** and check **Include this location in the search**.
6. Click on **Browse** and specify the path for the driver. Please refer to the Directory on EasyBUILD 7.1 build 100 for NIC driver in Driver required section.
7. Click on **Next** and follow the instruction to finish the driver update.

Downloaded from www.Manualslib.com manuals search engine

8. After installing the driver, you would see **Intel(R) PRO/1000 EB Network Connection with I/O Acceleration** listed in Network adapters.

IOAT Driver Installation

1. For **Base System Device,** it should be the onboard IOAT device. You could find the driver in EasyBUILD 7.1 build 100.
2. Right-click on the **Base System Device** and select **Update Driver**.
3. Select **No, not this time**. Do not connect to Windows Update to search the driver.
4. Select **Install from a list or specific location (Advanced)**.
5. Select **Search the best driver these locations** and check **Include this location in the search**.
6. Click on **Browse** and specify the path for the driver. Please refer to the Directory on EasyBUILD 7.1 build 100 for IOAT driver in Driver required section.
7. Click on **Next** and follow the instruction to finish the driver update.
8. After installing the driver, you would see **Intel(R) S000 Series Chipsets Integrated Device – 1A38** listed in System devices.

Hot-swap Backplane Driver Installation

1. There is a **ESG-SHV SCA HSBP M11.... SCSI Enclosure Device** listed under **Other device** in Windows Device Manager. It is the hot-swap SAS backplane for R720.
2. Right-click on the **ESG-SHV SCA HSBP M11.... SCSI Enclosure Device** and select **Update Driver**.
3. Select **No, not this time**. Do not connect to Windows Update to search the driver.
4. Select Install from a list or specific location (Advanced).
5. Select Search the best driver these locations and check Include this location in the search.
6. Click on **Browse** and specify the path for the driver. Please refer to the Directory on EasyBUILD 7.1 build 100 for Hot-swap backplane driver in Driver required section.
7. Click on **Next** and follow the instruction to finish the driver update.
8. After installing the driver, you would see **Intel (r) SCA Hotswap Backplane** listed in System devices.

ATI ES1000 Installation

1. Windows will treat onboard VGA as Standard VGA device. You can find

Downloaded from www.Manualslib.com manuals search engine

the ATI ES1000 driver in EasyBUILD 7.1 build 100. Please insert the EasyBUILD 7.1 build 100 into the optical drive.

2. Expand **Drivers -> Altos R720 -> Graphics adapters -> ATI ES1000**, select **Windows Server 2003 x64** and click on **Setup**.
3. Follow the instruction to install the VGA driver and reboot the server after the driver is installed.
4. After installing the driver, you would see **ATI ES1000** listed in Display adapters.

Microsoft Scalable Networking Pack Installation

You can find the Microsoft Scalable Networking Pack for Windows Server 2003 x64 in the Microsoft website http://www.microsoft.com/downloads/details.aspx?FamilyID=778ee6fe-5359-4c2f-b89d-f35f2b1b83cd&DisplayLang=en

1. Download the SNP from Microsoft website.
2. Double-click on the downloaded file to run the installation program.
3. Follow the instruction to install the SNP and reboot the server after the SNP is installed.

Intel RAID Web Console Installation

1. Please insert the EasyBUILD 7.1 build 100 into the optical drive.
2. Expand **Utilities -> Altos R720 -> Integrated SAS RAID**, select **Intel RAID WebConsole (Windows)** and click on **Setup.**
3. Follow the instruction and use the default setting to complete the Intel RAID WebConsole installation.

Intel PROSet Utility Installation

1. Please insert the EasyBUILD 7.1 build 100 into the optical drive.
2. Expand **Utilities -> Altos R720 -> Intel 82563EB Gigabit Controller**, select **PROSet Utility (Windows Server 2003 x64)** and click on **Setup.**
3. Follow the instruction and use the default setting to complete the Intel PROSet utility installation.

Windows Server 2003 Enterprise Edition SP1 Installation (with integrated SAS RAID)

Below information describes how to manually install Windows Server 2003 Enterprise Edition on Altos R720.

Drivers Required

For Windows 2003 Installation, the following device drivers are required.

Downloaded from www.Manualslib.com manuals search engine

Device	Version	Directory on EasyBUILD
Integrated SAS RAID	1.17.0.32	\Disk\R720\RAID\Integrated_SAS\WS2K3
Onboard Intel S000P Chipset	7.3.0.1011	\Disk\R720\onboard\Chipset\
Onboard Intel 82563EB Gigabit Ethernet	9.3.39.0	\Disk\R720\NIC\Intel\pro1000.net\ws032k\
Onboard ATI ES1000	8.24.3	\Disk\R720\onboard\VGA\W2K3\
Onboard USB 2.0	5.2.3790.1380	OS built-in
IOAT	1.2.52.0	\Disk\R720\onboard\IOAT\WS2K3
Hot-swap backplane	5.0.60SS.2	\Disk\R720\onboard\Backplane\Windows

Software Required

The management utility of integrated SAS RAID can be found in the EasyBUILD 7.1 build 100 (or later).

Software	Version	Directory on EasyBUILD
Microsoft Scalable Networking Pack	N/A	http://www.microsoft.com/downloads/details.aspx?FamilyID=c65f4a89-f4da-463e-a496-4b5abd660bf9&DisplayLang=en
Intel RAID Web Console	1.13-00	\APP\R720\RAID\Integrated_SAS\Windows
Intel PROSet Utility	10.4.4.2	\APP\R720\NIC\PROSETDX\2KXWS03\

Configuring integrated SAS RAID

Please refer to the Appendix A. for the integrated SAS RAID configuration.

Installation Tips

NOTE. There is no built-in driver Integrated SAS RAID in the Windows Server 2003. If you do not have the optional internal USB floppy drive, you need an external USB floppy drive for applying driver during the OS installation.

1. As Windows Server 2003 can't recognize the integrated SAS RAID, you need to make a driver diskette from the EasyBUILD 7.1 build 100 first before the installation.
2. Press F6 at the start of installation to provide the driver disk for the integrated SAS RAID.
3. Select "**Intel(R) SAS RAID Controller Driver (Server 2003 32-bit)**" as target driver
4. After loading the RAID driver from diskette, follow the normal procedure to finish the installation.

Downloaded from www.Manualslib.com manuals search engine

Chipset Driver Installation

1. After the installation completes, you would see the following devices with yellow mark in Device Manager.

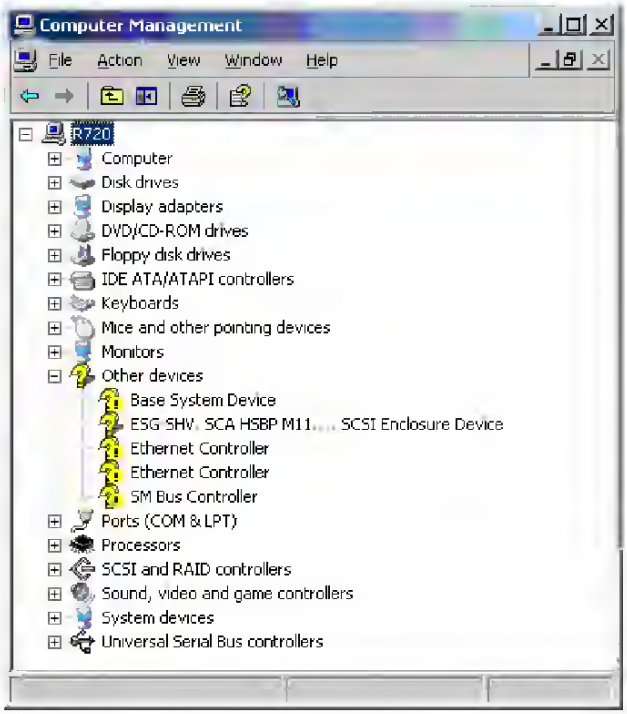

2. Please insert the EasyBUILD 7.1 build 100 into the optical drive
3. Expand **Drivers -> Altos R720 -> Chipset**, select **Windows Server 2003** and click on **Setup**.
4. Follow the instruction to install the driver and reboot the server after the chipset driver is installed.

Gigabit Ethernet Driver Installation

1. There are two **Ethernet Controller** listed under **Other device** in Windows Device Manager. It should be the onboard Intel 82563EB Gigabit Ethernet controller. You could find the driver in EasyBUILD 7.1 build 100. Please do the same on both of the devices.
2. Right-click on the **Ethernet Controller** and select **Update Driver**.
3. Select **No, not this time**. Do not connect to Windows Update to search the driver.
4. Select **Install from a list or specific location (Advanced)**.
5. Select **Search the best driver these locations** and check **Include this location in the search**.

Downloaded from www.Manualslib.com manuals search engine

6. Click on **Browse** and specify the path for the driver. Please refer to the Directory on EasyBUILD 7.1 build 100 for NIC driver in Driver required section.
7. Click on **Next** and follow the instruction to finish the driver update.
8. After installing the driver, you would see **Intel(R) PRO/1000 EB Network Connection with I/O Acceleration** listed in Network adapters.

IOAT Driver Installation

1. For **Base System Device**, it should be the onboard IOAT device. You could find the driver in EasyBUILD 7.1 build 100.
2. Right-click on the **Base System Device** and select **Update Driver**.
3. Select **No, not this time**. Do not connect to Windows Update to search the driver.
4. Select **Install from a list or specific location (Advanced)**.
5. Select **Search the best driver these locations** and check **Include this location in the search**.
6. Click on **Browse** and specify the path for the driver. Please refer to the Directory on EasyBUILD 7.1 build 100 for IOAT driver in Driver required section.
7. Click on **Next** and follow the instruction to finish the driver update.
8. After installing the driver, you would see **Intel(R) S000 Series Chipsets Integrated Device – 1A38** listed in System devices.

Hot-swap Backplane Driver Installation

1. There is a **ESG-SHV SCA HSBP M11.... SCSI Enclosure Device** listed under **Other device** in Windows Device Manager. It is the hot-swap SAS backplane for R720.
2. Right-click on the **ESG-SHV SCA HSBP M11.... SCSI Enclosure Device** and select **Update Driver**.
3. Select **No, not this time**. Do not connect to Windows Update to search the driver.
4. Select Install from a list or specific location (Advanced).
5. Select Search the best driver these locations and check Include this location in the search.
6. Click on **Browse** and specify the path for the driver. Please refer to the Directory on EasyBUILD 7.1 build 100 for Hot-swap backplane driver in Driver required section.
7. Click on **Next** and follow the instruction to finish the driver update

Downloaded from www.Manualslib.com manuals search engine

8. After installing the driver, you would see **Intel (r) SCA Hotswap Backplane** listed in System devices.

ATI ES1000 Installation

1. Windows will treat onboard VGA as Standard VGA device. You can find the ATI ES1000 driver in EasyBUILD 7.1 build 100. Please insert the EasyBUILD 7.1 build 100 into the optical drive.
2. Expand **Drivers -> Altos R720 -> Graphics adapters -> ATI ES1000,** select **Windows Server 2003** and click on **Setup**.
3. Follow the instruction to install the VGA driver and reboot the server after the driver is installed.
4. After installing the driver, you would see **ATI ES1000** listed in Display adapters.

Microsoft Scalable Networking Pack Installation

You can find the Microsoft Scalable Networking Pack for Windows Server 2003 in the Microsoft website:
http://www.microsoft.com/downloads/details.aspx?FamilyID=c65f4a89-f4da-463e-a496-4b5abd660bf9&DisplayLang=en

1. Download the SNP from Microsoft website.
2. Double-click on the downloaded file to run the installation program.
3. Follow the instruction to install the SNP and reboot the server after the SNP is installed.

Intel RAID Web Console Installation

1. Please insert the EasyBUILD 7.1 build 100 into the optical drive.
2. Expand **Utilities -> Altos R720 -> Integrated SAS RAID,** select **Intel RAID WebConsole (Windows)** and click on **Setup.**
3. Follow the instruction and use the default setting to complete the Intel RAID WebConsole installation.

Intel PROSet Utility Installation

1. Please insert the EasyBUILD 7.1 build 100 into the optical drive.
2. Expand **Utilities -> Altos R720 -> Intel 82563EB Gigabit Controller,** select **PROSet Utility (Windows Server 2003)** and click on **Setup.**
3. Follow the instruction and use the default setting to complete the Intel PROSet utility installation.

Windows 2000 Advanced Server SP4 Installation (with integrated SAS RAID)

Below information describes how to manually install Microsoft Windows 2000

Downloaded from www.Manualslib.com manuals search engine

Advanced Server SP4 on Altos R720 with integrated SAS RAID.

Drivers Required

For Windows 2000 Installation, the following device drivers are required.

Device	Version	Directory on EasyBUILD
Integrated SAS RAID	1.17.0.32	\Disk\R720\RAID\Integrated_SAS\W2K
Onboard Intel 5000P Chipset	7.3.0.1011	\Disk\R720\onboard\Chipset\
Onboard Intel 82563EB Gigabit Ethernet	9.3.39	\Disk\R720\NIC\Intel\pro1000.net\ws032k\
Onboard ATI ES1000	8.24.3	\Disk\R720\onboard\VGA\W2K\
Onboard USB 2.0	5.0.2195.6717	OS built-in
IOAT	1.2.52.0	\Disk\R720\onboard\IOAT\WS2K3
Hot-swap backplane	5.0.6055.2	\Disk\R720\onboard\Backplane\Windows

Software Required

The management utility of integrated SAS RAID can be found in the EasyBUILD 7.1 build 100 (or later).

Software	Version	Directory on EasyBUILD
Intel RAID Web Console	1.13-00	\APP\R720\RAID\Integrated_SAS\Windows
Intel PROSet Utility	10.4.4.2	\APP\R720\NIC\PROSETDX\2KXWS03\

Configuring integrated SAS RAID

Please refer to the Appendix A. for the integrated SAS RAID configuration.

Installation Tips

NOTE. There is no built-in driver Integrated SAS RAID in the Windows 5erver 2003. If you do not have the optional internal USB floppy drive, you need an external USB floppy drive for applying driver during the OS installation.

1. As Windows 2000 can't recognize the integrated SAS RAID, you need to make a driver diskette from the EasyBUILD 7.1 build 100 first before the installation.
2. Press F6 at the start of installation to provide the driver disk for the onboard ROMB.
3. Select "**Intel(R) SAS RAID Controller Driver (Windows 2000)**" as target driver
4. After loading the driver from diskette, follow the normal procedure to finish the installation.

Downloaded from www.Manualslib.com manuals search engine

Chipset Driver Installation

1. After the installation completes, you would see the following other devices listed in Device Manager.

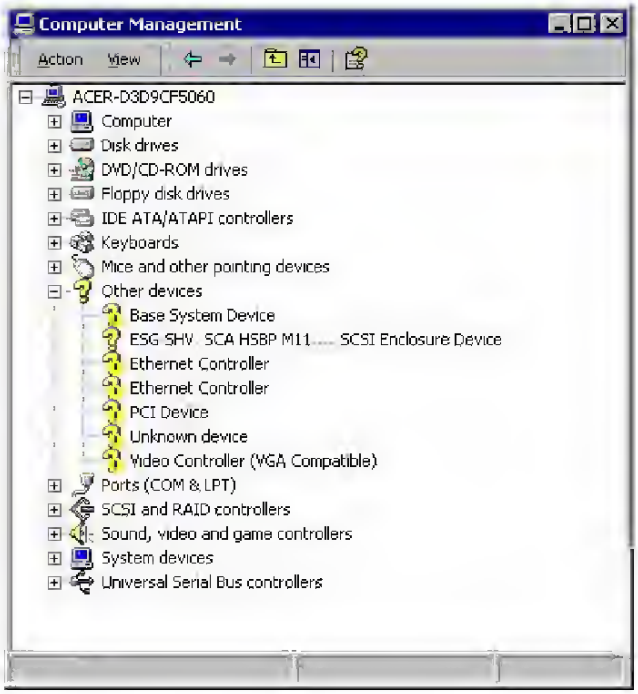

2. Please insert the EasyBUILD 7.1 build 100 into the optical drive
3. Expand **Drivers -> Altos R720 -> Chipset** and double-click on **Windows 2000**.
4. Follow the instruction to install the driver and reboot the server after the chipset driver is installed.

Gigabit Ethernet Driver Installation

1. There are two **Ethernet Controller** listed under **Other device** in Windows Device Manager. It should be the onboard Intel 82563EB Gigabit Ethernet controller. You could find the driver in EasyBUILD 7.1 build 100. Please do the same on the both of the devices.
2. Right-click on the **Ethernet Controller** and select **Properties**
3. Select **Driver** tab and click on **Update Driver**
4. Follow the instructions. Select Search for a suitable driver for my device (Recommended) and click on Next
5. Check on the **Specify a location** and click on **Next** to specify the path for the driver. Please refer to the Directory on EasyBUILD 7.1 build 100 for NIC driver in Driver required section.

Downloaded from www.Manualslib.com manuals search engine

6. Follow the instructions to finish the installation.
7. After installing the driver, you would see **Intel(R) PRO/1000 EB Network Connection with I/O Acceleration** listed in Network adapters.

IOAT Driver Installation

1. For **Base System Device**, it should be the onboard IOAT device. You could find the driver in Resource CD.
2. Right-click on the **Base System Device** and select **Properties**.
3. Select **Driver** tab and click on **Update Driver**.
4. Follow the instructions. Select Search for a suitable driver for my device (Recommended) and click on Next.
5. Check on the **Specify a location** and click on **Next** to specify the path for the driver. Please refer to the Directory on EasyBUILD 7.1 build 100 for IOAT driver in Driver required section.
6. Follow the instruction to finish the driver update.
7. After installing the driver, you would see **Intel(R) S000 Series Chipsets Integrated Device – 1A38** listed in System devices.

Hot-swap Backplane Driver Installation

1. There is a **ESG-SHV SCA HSBP M11.... SCSI Enclosure Device** listed under **Other device** in Windows Device Manager. It is the hot-swap SAS backplane for R720.
2. Right-click on the **ESG-SHV SCA HSBP M11.... SCSI Enclosure Device** and select **Properties**.
3. Select **Driver** tab and click on **Update Driver**.
4. Follow the instructions. Select Search for a suitable driver for my device (Recommended) and click on Next.
5. Check on the **Specify a location** and click on **Next** to specify the path for the driver. Please refer to the Directory on EasyBUILD 7.1 build 100 for IOAT driver in Driver required section.
6. Follow the instruction to finish the driver update.
7. After installing the driver, you would see **Intel (r) SCA Hotswap Backplane** listed in System devices.

ATI ES1000 Installation

1. There is a **VGA controller (VGA Compatible)** listed under **Other devices** in Windows Device Manager. It is the ATI ES1000 for R720.
2. Insert the EasyBUILD 7.1 build 100 into the optical drive.
3. Expand **Drivers -> Altos R720 -> Graphics adapters -> ATI ES1000** and

Downloaded from www.Manualslib.com manuals search engine

double-click on **Windows 2000.**

4. Follow the instruction to install the VGA driver and reboot the server after the driver is installed.
5. After installing the driver, you would see **ATI ES1000** listed in Display adapters.

Intel RAID Web Console Installation

1. Please insert the EasyBUILD 7.1 build 100 into the optical drive.
2. Expand **Utilities -> Altos R720 -> Integrated SAS RAID,** select **Intel RAID WebConsole (Windows)** and click on **Setup.**
3. Follow the instruction and use the default setting to complete the Intel RAID WebConsole installation.

Intel PROSet Utility Installation

1. Please insert the EasyBUILD 7.1 build 100 into the optical drive.
2. Expand **Utilities -> Altos R720 -> Intel B2S63EB Gigabit Controller,** select **PROSet Utility (Windows 2000)** and click on **Setup.**
3. Follow the instruction and use the default setting to complete the Intel PROSet utility installation.

Red Hat Enterprise Linux 4.0 EM64T Update 2 Installation (with integrated SAS RAID)

Below information describes how to manually install Red Hat Enterprise Linux 4.0 EM64T Update 2 on Altos R720 with integrated SAS RAID.

Drivers Required

For Red Hat Enterprise Linux 4.0 Update 2 Installation, the following device drivers are required.

Device	Version	Directory on EasyBUILD
Integrated SAS RAID	00.00.02.00-4	\Disk\R720\RAID\Integrated_SAS\RHEL 4\
Onboard Intel S000P Chipset	N/A	OS built-in
Onboard Intel B2S63EB Gigabit Ethernet	7.0.38-NAPI	\Disk\R720\NIC\Intel\pro1000.lx
Onboard ATI ES1000	N/A	OS built-in
Onboard USB 2.0	N/A	OS built-in
IOAT	N/A	OS built-in

Downloaded from www.Manualslib.com manuals search engine

Software Required

The management utility of integrated SAS RAID can be found in the EasyBUILD 7.0 build 100 (or later).

Software	Version	Directory on EasyBUILD
Intel RAID Web Console	1.13-00	\app\r720\raid\Integrated_SAS\Linux\

Configuring integrated SAS RAID

Please refer to the Appendix A. for the integrated SAS RAID configuration.

Installation Tips

NOTE. There is no built-in driver Integrated SAS RAID in the Red Hat Enterprise Linux 4.0 EM64T Update2. If you do not have the optional internal USB floppy drive, you need an external USB floppy drive for applying driver during the OS installation.

1. Since Red Hat Enterprise Linux 4.0 EM64T Update2 cannot recognize the integrated SAS RAID, you need to make a driver diskette from the EasyBUILD 7.1 build 100 first before the installation.
2. Type **linux dd** when the prompt **boot**: appears at the start.
3. Please select the **sda** as the **Driver Disk Source**.
4. Follow the instruction to load the integrated SAS RAID driver from the driver diskette.
5. At the **Package Installation Defaults**, select **Customize software packages to be installed**.
6. At the **Package Group Selection** step, select **Development Tools** under **Development**.
7. Follow the normal procedure to finish the installation.

Gigabit Ethernet Driver Installation

1. You can find the Intel 82546EB driver in EasyBUILD 7.1 build 100. Please refer to directory of the 82546EB driver in Driver Required section and copy the driver from the EasyBUILD 7.1 build 100 to HDD first.

```
# mount /media/cdrecorder

# cp -R /media/cdrecorder/Disk/R720/NIC/Intel/pro1000.lx/. /tmp
```

2. Change the directory to the driver source and install the driver

```
# cd /tmp/src/

# make install

# insmod e1000.ko
```

3. Run the kudzu utility, it will auto detect the Intel 82563EB network

Downloaded from www.Manualslib.com manuals search engine

controller and help you to configure it

```
# kudzu
```

4. Restart the network service to bring up both of the network interfaces.

```
# service network restart
```

Intel RAID Web Console Installation

1. You can find the Intel RAID Web Console in EasyBUILD 7.1 build 100. Please refer to directory of the Intel RAID Web Console in Software Required section and copy the utility from the EasyBUILD 7.1 build 100 to HDD first.

```
# mount /media/cdrecorder
# cp -R /media/cdrecorder/app/r720/raid/Integrated_SAS/Linux/. /tmp
```

2. Install Intel RAID Web Console utility

```
# cd /tmp/
# unzip ir3_Linux_RWC2_v1.13-00.zip
# chmod 755 install.sh
# chmod 755 RunRPM.sh
# ./install.sh
```

3. Type y to accept the license agreen and select 1 for full installation.
4. To start Intel RAID Web Console on, select **applications -> System Tools -> RAID Web Console 2 Startup UI**

Red Hat Enterprise Linux 4.0 Update 2 Installation (with integrated SAS RAID)

Below information describes how to manually install Red Hat Enterprise Linux 4.0 Update 2 on Altos R720 with integrated SAS RAID.

Drivers Required

For Red Hat Enterprise Linux 4.0 Update 2 Installation, the following device drivers are required.

Device	Version	Directory on EasyBUILD
Integrated SAS RAID	00.00.02.00-4	\Disk\R720\RAID\Integrated_SAS\RHEL 4\
Onboard Intel 5000P Chipset	N/A	OS built-in
Onboard Intel 82563EB Gigabit Ethernet	7.0.38-NAPI	\Disk\R720\NIC\Intel\pro1000.lx
Onboard ATI	N/A	OS built-in

Downloaded from www.Manualslib.com manuals search engine

ES1000		
Onboard USB 2.0	N/A	OS built-in
IOAT	N/A	OS built-in

Software Required

The management utility of integrated SAS RAID can be found in the EasyBUILD 7.1 build 100 (or later).

Software	Version	Directory on EasyBUILD
Intel RAID Web Console	1.13-00	\app\r720\raid\Integrated_SAS\Linux\

Configuring integrated SAS RAID

Please refer to the Appendix A. for the integrated SAS RAID configuration.

Installation Tips

NOTE. There is no built-in driver Integrated SAS RAID in the Red Hat Enterprise Linux 4.0 Update2. If you do not have the optional internal USB floppy drive, you need an external USB floppy drive for applying driver during the OS installation.

1. Since Red Hat Enterprise Linux 4.0 Update2 cannot recognize the integrated SAS RAID, you need to make a driver diskette from the EasyBUILD 7.1 build 100 first before the installation.
2. Type **linux dd** when the prompt **boot**: appears at the start.
3. Please select the **sda** as the **Driver Disk Source**.
4. Follow the instruction to load the integrated SAS RAID driver from the driver diskette
5. At the **Package Installation Defaults**, select **Customize software packages to be installed**.
6. At the **Package Group Selection** step, select **Development Tools** under **Development**.
7. Follow the normal procedure to finish the installation.

Gigabit Ethernet Driver Installation

1. You can find the Intel 82546EB driver in EasyBUILD 7.1 build 100. Please refer to directory of the 82546EB driver in Driver Required section and copy the driver from the EasyBUILD 7.1 build 100 to HDD first.

```
# mount /media/cdrecorder

# cp -R /media/cdrecorder/Disk/R720/NIC/Intel/pro1000.lx/. /tmp
```

2. Change the directory to the driver source and install the driver

```
# cd /tmp/src/
```


Downloaded from www.Manualslib.com manuals search engine

```
# make install

# insmod e1000.ko
```

3. Run the kudzu utility, it will auto detect the Intel 82563EB network controller and help you to configure it

```
# kudzu
```

4. Restart the network service to bring up both of the network interfaces.

```
# service network restart
```

Intel RAID Web Console Installation

1. You can find the Intel RAID Web Console in EasyBUILD 7.1 build 100. Please refer to directory of the Intel RAID Web Console in Software Required section and copy the utility from the EasyBUILD 7.1 build 100 to HDD first.

```
# mount /media/cdrecorder

# cp -R /media/cdrecorder/app/r720/raid/Integrated_SAS/Linux/. /tmp
```

2. Install Intel RAID Web Console utility

```
# cd /tmp/

# unzip ir3_Linux_RWC2_v1.13-00.zip

# chmod 755 install.sh

# chmod 755 RunRPM.sh

# ./install.sh
```

3. Type y to accept the license agreen and select 1 for full installation.
4. To start Intel RAID Web Console, select **applications -> System Tools -> RAID Web Console 2 Startup UI**

SUSE Linux Enterprise Server 10 EM64T Installation (with integrated SAS RAID)

Below information describes how to manually install SUSE Linux Enterprise Server 10 EM64T on Altos R720 with integrated SAS RAID.

Drivers Required

For SUSE Linux Enterprise Server 10 EM64T Installation, the following device drivers are required. The drivers can be found in the EasyBUILD 7.1 build 600 (or later).

Device	Version	Directory on EasyBUILD
Integrated SAS RAID	00.00.03.07	\Disk\r720\raid\Integrated_SAS\sle10\
Onboard Intel	N/A	OS built-in

Downloaded from www.Manualslib.com manuals search engine

S000P Chipset		
Onboard Intel 82563EB Gigabit Ethernet	7.3.1S-NAPI	\Disk\R720\NIC\Intel\pro1000.lx
Onboard ATI ES1000	N/A	OS built-in
Onboard USB 2.0	N/A	OS built-in

Software Required

The management utility of integrated SAS RAID can be found in the EasyBUILD 7.1 build 600 (or later).

Software	Version	Directory on EasyBUILD
Intel RAID Web Console	1.19-00	\app\r720\raid\Integrated_SAS\Linux\

Configuring integrated SAS RAID

Please refer to the Appendix A. for the integrated SAS RAID configuration.

Installation Tips

NOTE. The driver of Integrated SAS RAID is required for the SUSE Linux Enterprise Server 10 EM64T installation. If you do not have the optional internal USB floppy drive, you need an external USB floppy drive for applying driver during the OS installation.

1. Since SUSE Linux Enterprise Server 10 EM64T cannot recognize the integrated SAS RAID, you need to make a driver diskette from the EasyBUILD 7.1 build 600 first before the installation.
2. Boot the system with SUSE Linux Enterprise Server 10 EM64T CD #1.
3. When you see the boot menu on the screen, select **Installation.** Then press **F5** and select **YES** for the driver loading in the installation. Press Enter to continue.
4. Follow the instruction to load the integrated SAS RAID driver from the driver diskette.
5. At the Installation Settings, select the Software and click on **Details.** Select "Package Groups" in the Filter drop-down menu, then click Development -> sources to add **kernel** package. Select "Patterns" in the Filter drop-down menu, then add **C/C++ Compiler and Tools** packages.
6. Follow the instruction to complete the installation of CD #1.
7. Remove the driver diskette when system automatically reboot at the end of the installation process with CD #1.

NOTE. If the driver diskette is kept in the FDD, you would see below message even though you've inserted the installation CD #2. In this case, please press

Downloaded from www.Manualslib.com manuals search engine

"Ctrl+Alt+F2" to switch to another terminal. Issue the "reboot" command to reboot the system. Then, remove the driver diskette and continue the installation.

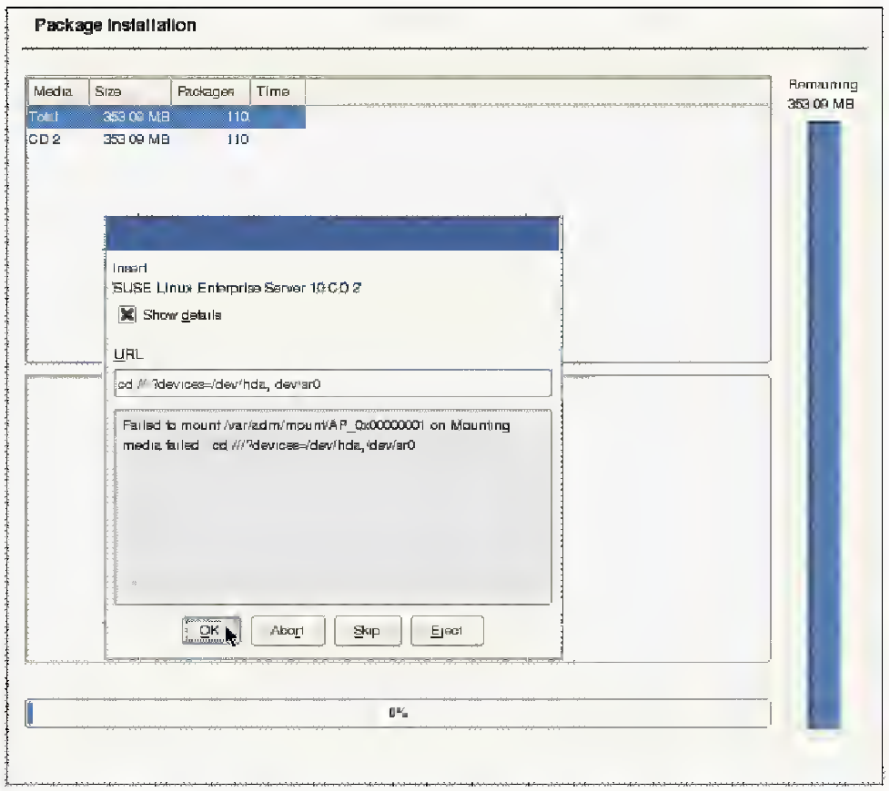

8. Follow the instruction to complete the installation with remained installation CDs.

Gigabit Ethernet Driver Installation

1. You can find the Intel 82546EB driver in EasyBUILD 7.1. Please refer to directory of the 82546EB driver in Driver Required section above and copy the driver from the EasyBUILD 7.1 to HDD first.

```
# mount /media/dvdram

# cp -R /media/dvdram/Disk/R720/NIC/Intel/pro1000.lx/. /tmp
```

2. Change the directory to the driver source and install the driver

```
# cd /tmp/src/

# make install

# insmod e1000.ko
```

3. Run the YaST2 utility.

Downloaded from www.Manualslib.com manuals search engine

```
# YaST2
```

4. Select **Network Devices -> Network Card,** it will auto detect the Intel 82S63EB network controller and help you to configure it.

Intel RAID Web Console Installation

9. You can find the Intel RAID Web Console in EasyBUILD 7.1. Please refer to the directory of the Intel RAID Web Console in Software Required section above and copy the utility from the EasyBUILD 7.1 to HDD first.

```
# mount /media/dvdram
# cp -R /media/dvdram/app/r720/raid/Integrated_SAS/Linux/. /tmp
```

10. Install Intel RAID Web Console utility

```
# cd /tmp/
# chmod 755 install.sh
# chmod 755 RunRPM.sh
# ./install.sh
```

11. Type y to accept the license agreen and select 1 for full installation.
12. To start Intel RAID Web Console, click on start button, select **System -> More Programs -> RAID Web Console 2 Startup UI**

SUSE Linux Enterprise Server 10 Installation (with integrated SAS RAID)

Below information describes how to manually install SUSE Linux Enterprise Server 10 on Altos R720 with integrated SAS RAID.

Drivers Required

For SUSE Linux Enterprise Server 10 Installation, the following device drivers are required. The drivers can be found in the EasyBUILD 7.1 build 600 (or later).

Device	Version	Directory on EasyBUILD
Integrated SAS RAID	00.00.03.07	\Disk\r720\raid\Integrated_SAS\sle10\
Onboard Intel S000P Chipset	N/A	OS built-in
Onboard Intel 82S63EB Gigabit Ethernet	7.3.15-NAPI	\Disk\R720\NIC\Intel\pro1000.lx
Onboard ATI ES1000	N/A	OS built-in
Onboard USB 2.0	N/A	OS built-in

Downloaded from www.Manualslib.com manuals search engine

Software Required

The management utility of integrated SAS RAID can be found in the EasyBUILD 7.1 build 600 (or later).

Software	Version	Directory on EasyBUILD
Intel RAID Web Console	1.19-00	\app\r720\raid\Integrated_SAS\Linux\

Configuring integrated SAS RAID

Please refer to the Appendix A. for the integrated SAS RAID configuration.

Installation Tips

NOTE. The driver of Integrated SAS RAID is required for the SUSE Linux Enterprise Server 10 installation. If you do not have the optional internal USB floppy drive, you need an external USB floppy drive for applying driver during the OS installation.

1. Since SUSE Linux Enterprise Server 10 cannot recognize the integrated SAS RAID, you need to make a driver diskette from the EasyBUILD 7 1 build 600 first before the installation.
2. Boot the system with SUSE Linux Enterprise Server 10 CD #1.
3. When you see the boot menu on the screen, select **Installation.** Then press **F5** and select **YES** for the driver loading in the installation. Press Enter to continue
4. Follow the instruction to load the integrated SAS RAID driver from the driver diskette
5. At the Installation Settings, select the Software and click on **Details.** Select "Package Groups" in the Filter drop-down menu, then click Development -> sources to add **kernel** package. Select "Patterns" in the Filter drop-down menu, then add **C/C++ Compiler and Tools** packages
6. Follow the instruction to complete the installation of CD #1.
7. Remove the driver diskette when system automatically reboot at the end of the installation process with CD #1.

NOTE. If the driver diskette is kept in the FDD, you would see below message even though you've inserted the installation CD #2. In this case, please press "Ctrl+Alt+F2" to switch to another terminal. Issue the "reboot" command to reboot the system. Then, remove the driver diskette and continue the installation.

Downloaded from www.Manualslib.com manuals search engine

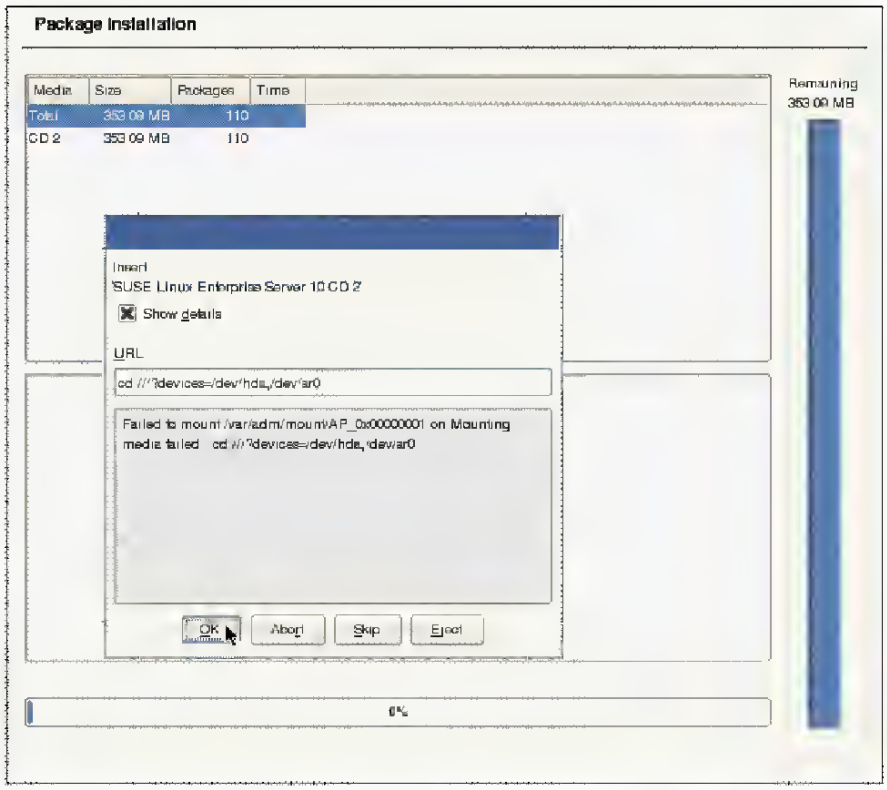

8. Follow the instruction to complete the installation with remained installation CDs.

Gigabit Ethernet Driver Installation

1. You can find the Intel 82546EB driver in EasyBUILD 7.1. Please refer to directory of the 82546EB driver in Driver Required section above and copy the driver from the EasyBUILD 7.1 to HDD first.

```
# mount /media/dvdram

# cp -R /media/dvdram/Disk/R720/NIC/Intel/pro1000.lx/. /tmp
```

2. Change the directory to the driver source and install the driver

```
# cd /tmp/src/

# make install

# insmod e1000.ko
```

3. Run the YaST2 utility.

```
# YaST2
```

4. Select **Network Devices -> Network Card,** it will auto detect the Intel 82563EB network controller and help you to configure it

Downloaded from www.Manualslib.com manuals search engine

Intel RAID Web Console Installation

1. You can find the Intel RAID Web Console in EasyBUILD 7.1. Please refer to the directory of the Intel RAID Web Console in Software Required section above and copy the utility from the EasyBUILD 7.1 to HDD first.

```
# mount /media/dvdram
# cp -R /media/dvdram/app/r720/raid/Integrated_SAS/Linux/. /tmp
```

2. Install Intel RAID Web Console utility

```
# cd /tmp/
# chmod 755 install.sh
# chmod 755 RunRPM.sh
# ./install.sh
```

3. Type y to accept the license agreen and select 1 for full installation.
4. To start Intel RAID Web Console, click on start button, select **System -> More Programs -> RAID Web Console 2 Startup UI**

SUSE Linux Enterprise Server 9 EM64T Service Pack 3 Installation (with integrated SAS RAID)

Below information describes how to manually install SUSE Linux Enterprise Server 9 EM64T Service Pack 3 on Altos R720 with integrated SAS RAID.

Drivers Required

For SUSE Linux Enterprise Server 9 EM64T Service Pack 3 Installation, the following device drivers are required.

Device	Version	Directory on EasyBUILD
Integrated SAS RAID	00.00.02.03-1	\Disk\R720\RAID\Integrated_SAS\SLES9 X64\
Onboard Intel S000P Chipset	N/A	OS built-in
Onboard Intel 82563EB Gigabit Ethernet	7.0.38-NAPI	\Disk\R720\NIC\Intel\pro1000.lx
Onboard ATI ES1000	N/A	OS built-in
Onboard USB 2.0	N/A	OS built-in

Software Required

The management utility of integrated SAS RAID can be found in the EasyBUILD 7.1 build 100 (or later).

Software	Version	Directory on EasyBUILD
Intel RAID Web	1.13-00	\app\r720\raid\Integrated_SAS\Linux\

Downloaded from www.Manualslib.com manuals search engine

Console		

Configuring integrated SAS RAID

Please refer to the Appendix A. for the integrated SAS RAID configuration.

Installation Tips

NOTE. There is no built-in driver Integrated SAS RAID in the SUSE Linux Enterprise Server 9 EM64T Service Pack 3. If you do not have the optional internal USB floppy drive, you need an external USB floppy drive for applying driver during the OS installation.

1. Since SUSE Linux Enterprise Server 9 EM64T Service Pack 3 cannot recognize the integrated SAS RAID, you need to make a driver diskette from the EasyBUILD 7.1 build 100 first before the installation.
2. Boot the system form SUSE Linux Enterprise Server 9 EM64T Service Pack3 bootable CD.
3. When you see the boot menu on the screen, select **Installation**, press F6 then press Enter to continue.
4. Follow the instruction to load the integrated SAS RAID driver from the driver diskette
5. Follow the instruction to change the CD to SUSE Linux Enterprise Server 9 EM64T CD #1.
6. At the Installation Settings, select the Software and click on **Detailed selection** to add **kernel-source** and **C/C++ Compiler and Tools** to install.
7. To add C/C++ compiler tools, please check **C/C++ Compiler and Tools** in the left window.
8. To add kernel-source, please select **Various Linux Tools** in the left window and check **kernel-source** in the right window
9. After you add the **kernel-source** and **C/C++ Compiler and Tools**, please click on **Accept** and follow the instruction to complete the installation.

Gigabit Ethernet Driver Installation

1. You can find the Intel 82S46EB driver in EasyBUILD 7.1 build 100. Please refer to directory of the 82S46EB driver in Driver Required section and copy the driver from the EasyBUILD 7.1 build 100 to HDD first.

```
# mount /media/dvdram

# cp -R /media/dvdram/Disk/R720/NIC/Intel/pro1000.lx/. /tmp
```

2. Change the directory to the driver source and install the driver

```
# cd /tmp/src/

# make install
```


Downloaded from www.Manualslib.com manuals search engine

```
# insmod e1000.ko
```

3. Run the YaST2 utility.

```
# YaST2
```

4. Select **Network Devices -> Network Card**, it will auto detect the Intel 82563EB network controller and help you to configure it

Intel RAID Web Console Installation

1. You can find the Intel RAID Web Console in EasyBUILD 7.1 build 100. Please refer to directory of the Intel RAID Web Console in Software Required section and copy the utility from the EasyBUILD 7.1 build 100 to HDD first.

```
# mount /media/dvdram
# cp -R /media/dvdram/app/r720/raid/Integrated_SAS/Linux/. /tmp
```

2. Install Intel RAID Web Console utility

```
# cd /tmp/
# unzip ir3_Linux_RWC2_v1.13-00.zip
# chmod 755 install.sh
# chmod 755 RunRPM.sh
# ./install.sh
```

3. Type y to accept the license agreen and select 1 for full installation.
4. To start Intel RAID Web Console, click on start button, select **System -> More Programs -> RAID Web Console 2 Startup UI**

SUSE Linux Enterprise Server 9 Service Pack 3 Installation (with integrated SAS RAID)

Below information describes how to manually install SUSE Linux Enterprise Server 9 Service Pack 3 on Altos R720 with integrated SAS RAID.

Drivers Required

For SUSE Linux Enterprise Server 9 Service Pack 3 Installation, the following device drivers are required.

Device	Version	Directory on EasyBUILD
Integrated SAS RAID	00.00.02.03-1	\Disk\R720\RAID\Integrated_SAS\SLES9\
Onboard Intel S000P Chipset	N/A	OS built-in
Onboard Intel 82563EB Gigabit Ethernet	7.0.38-NAPI	\Disk\R720\NIC\Intel\pro1000.lx

Downloaded from www.Manualslib.com manuals search engine

Onboard ATI ES1000	N/A	OS built-in
Onboard USB 2.0	N/A	OS built-in

Software Required

The management utility of integrated SAS RAID can be found in the EasyBUILD 7.1 build 100 (or later).

Software	Version	Directory on EasyBUILD
Intel RAID Web Console	1.13-00	\app\r720\raid\Integrated_SAS\Linux\

Configuring integrated SAS RAID

Please refer to the Appendix A. for the integrated SAS RAID configuration.

Installation Tips

NOTE. There is no built-in driver Integrated SAS RAID in the SUSE Linux Enterprise Server 9 Service Pack 3. If you do not have the optional internal USB floppy drive, you need an external USB floppy drive for applying driver during the OS installation.

1. Since SUSE Linux Enterprise Server 9 Service Pack 3 cannot recognize the integrated SAS RAID, you need to make a driver diskette from the EasyBUILD 7.1 build 100 first before the installation.
2. Boot the system form SUSE Linux Enterprise Server 9 Service Pack3 bootable CD.
3. When you see the boot menu on the screen, select **Installation**, press F6 then press Enter to continue.
4. Follow the instruction to load the integrated SAS RAID driver from the driver diskette.
5. Follow the instruction to change the CD to SUSE Linux Enterprise Server 9 CD #1.
6. At the Installation Settings, select the Software and click on **Detailed selection** to add **kernel-source** and **C/C++ Compiler and Tools** to install.
7. To add C/C++ compiler tools, please check **C/C++ Compiler and Tools** in the left window.
8. To add kernel-source, please select **Various Linux Tools** in the left window and check **kernel-source** in the right window.
9. After you add the **kernel-source** and **C/C++ Compiler and Tools**, please click on **Accept** and follow the instruction to complete the installation.

Gigabit Ethernet Driver Installation

1. You can find the Intel 82S46EB driver in EasyBUILD 7.1 build 100. Please

Downloaded from www.Manualslib.com manuals search engine

refer to directory of the 82546EB driver in Driver Required section and copy the driver from the EasyBUILD 7.1 build 100 to HDD first.

```
# mount /media/dvdram
# cp -R /media/dvdram/Disk/R720/NIC/Intel/pro1000.lx/. /tmp
```

2. Change the directory to the driver source and install the driver

```
# cd /tmp/src/
# make install
# insmod e1000.ko
```

3. Run the YaST2 utility.

```
# YaST2
```

4. Select **Network Devices -> Network Card**, it will auto detect the Intel 82563EB network controller and help you to configure it

Intel RAID Web Console Installation

1. You can find the Intel RAID Web Console in EasyBUILD 7.1 build 100. Please refer to directory of the Intel RAID Web Console in Software Required section and copy the utility from the EasyBUILD 7.1 build 100 to HDD first.

```
# mount /media/dvdram
# cp -R /media/dvdram/app/r720/raid/Integrated_SAS/Linux/. /tmp
```

2. Install Intel RAID Web Console utility

```
# cd /tmp/
# unzip ir3_Linux_RWC2_v1.13-00.zip
# chmod 755 install.sh
# chmod 755 RunRPM.sh
# ./install.sh
```

3. Type y to accept the license agreen and select 1 for full installation.
4. To start Intel RAID Web Console, click on start button, select **System -> More Programs -> RAID Web Console 2 Startup UI**

NetWare 6.5 SP5 Installation (with integrated SAS RAID)

Below information describes how to manually install NetWare 6.5 (Support Pack 5 overlay CD) on Altos R720 with integrated SAS RAID.

Drivers Required

For NetWare 6.5 SP5 installation with integrated SAS RAID, the following device drivers are required.

Downloaded from www.Manualslib.com manuals search engine

Device	Version	Directory on EasyBUILD
Integrated SAS RAID	1.00.07	\Disk\R720\RAID\Integrated_SAS\NW6.5\
Onboard Intel S000P Chipset	N/A	OS built-in
Onboard Intel 82563EB Gigabit Ethernet	9.22	\Disk\R720\NIC\Intel\pro1000.nw
Onboard ATI ES1000	N/A	OS built-in
Onboard USB 2.0	N/A	OS built-in

Installation Tips

NOTE. You need to apply the integrated SAS RAID and NIC driver during the installation. If you do not have the optional internal USB floppy drive, you need an external USB floppy drive.

1. Make a driver diskette for integrated SAS RAID and onboard Intel 82563EB Gigabit Ethernet from EasyBUILD 7.1 build 100.
2. Boot the system from the NetWare 6.5 SPS OS CD.
3. At **Welcome to the NetWare 6.5 server installation** page, select **Manual** to install.
4. At **Prepare boot partition** page, create one 500 MB DOS partition.
5. When you see the following message, please select Modify. Then, move the cursor to Storage adapters and press **Enter**.

```
The following device drivers were detected for this
server. Add, change, or delete device drivers as
needed.

Device types              Driver names
------------------------  --------------
Storage adapters:         IDEATA, IDEATA, MEGA_SAS
```

6. Please press **Delete** to delete MEGA_SAS.HAM modules
7. Then, press **INSERT** key to insert the integrated SAS RAID driver. After the drivers are successfully loaded, please select Return to driver summary.
8. Continue the installation.
9. When you see the following message, please select Modify. Then, move the cursor to Network boards and press **Enter**.

```
The following device drivers were detected for this
server. Add, change, or delete device drivers as
```


Downloaded from www.Manualslib.com manuals search engine

```
needed.

Device types                Driver names
-------------------------  --------------
Network boards:
NetWare Loadable Modules:  (optional)
```

10. Please press INSERT key to insert the onboard Intel 82563EB Gigabit Ethernet driver. After the drivers are successfully loaded, please select Return to driver summary.
11. Then, you would see the following message. Please select Continue.

```
The following device drivers were detected for this
server. Add, change, or delete device drivers as
needed.

Device types                Driver names
-------------------------  --------------
Network boards:            E1000E, E1000E
Network Loadable Modules:  (optional)
```

12. Please follow the normal procedures to complete the NetWare 6.5 installation.

Downloaded from www.Manualslib.com manuals search engine

APPENDIX A: INTEGRATED SAS RAID CREATION

Configuring integrated SAS RAID

This section briefly shows how to create RAID with integrated SAS RAID.

Starting Integrated SAS RAID Configuration Utility

Please press **ESC** to show the detail POST information first when you power on the system. When you see the RAID BIOS during POST, please press **CTRL-G** to launch the SAS RAID configuration utility. After POST finished, the Adapter Selection page will show on the screen. Please click on **Start** to launch the configuration menu.

Loading Factory Default Setting

1. In the Configuration menu, select **Adapter Properties**. The current adapter settings appear. Please click on **Next** to change the setting.
2. Change the setting of **Set Factory Defaults** from **No** to **Yes** then click on **submit**.
3. Press **Ctrl+Alt+Del** to reboot the server.

Creating and Initialing a RAID Volume

1. Launch the configuration menu.
2. Select **Configuration Wizard**
3. Select **Add Configuration** (default) and click on **Next**.
4. Select **Custom Configuration** (default) and click on **Next**.
5. Select the drives that you want to add into the array with **Ctrl** key. After you select the drives, click on **Accept DG** then **Next**.
6. Select the **RAID Level** you want to use, create the logical volume by specify the size at **Select Size** and click on **Accept** to create the logical volume.
7. After you create the logical volumes on all of the RAID volume, click on **Accept** and **Yes** to save the configuration.
8. Click on **Yes** to initialize the new logical drives. You will see all the logical drives listed.
9. Click on **Home** to go back to the configuration menu.
10. Now you can reboot the system and install the Operating System. Select **Exit**, click on **Yes** and press **Ctrl+Alt+Del** to reboot the system.

Assigning a Hot Spare Disk

1. Launch the configuration menu.
2. Select a free disk marked as **UNCONF GOOD** and listed under **Physical Drives**.

Downloaded from www.Manualslib.com manuals search engine

3. Select **Make Global Dedicated HSP** or **Make Dedicated DSP** and click on **Go**.

4. Click on **Home** to go back to the configuration menu. You will see the disk marked as **Hotsapare** in pink and listed under Physical Drives.

Downloaded from www.Manualslib.com manuals search engine